RUGLOCK®
NON-SLIP RUG GRIP IN A CAN

RugLock Instructions

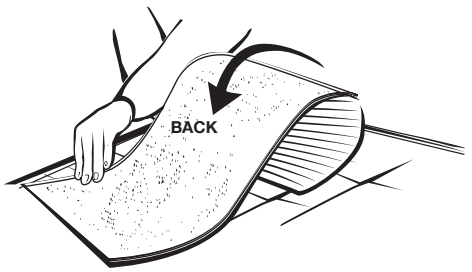

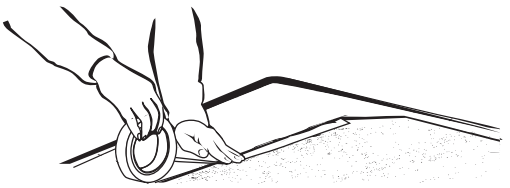

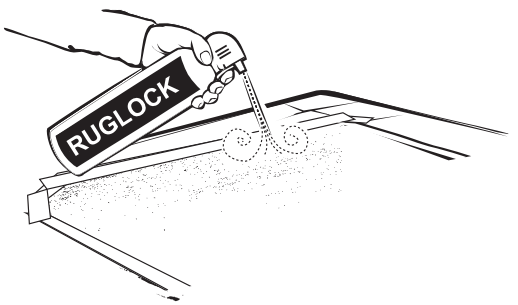

1. Open drop cloth in large, ventilated area away from obstructions.
2. Place rug upside down in the center of the drop cloth.
3. Ensure rug backing is completely clean and free of hair, lint, dirt or any debris that could interfere with the bonding of RugLock on the rug backing.
4. If desired, use blue painter tape around perimeter of rug to protect edges or any fringe from overspray. This method creates a clean edge on rug backing. If over-spray occurs remove with a damp cloth.
5. **SHAKE CAN WELL.** Holding can approximately 12 inches away, spray from top left to top right in one sweeping motion. Evenly work your way down the rug, ensuring you match the desired spray pattern.
6. Let RugLock dry on backing of rug for a MINIMUM of 4 hours in climate-controlled environment; overnight is ideal.
7. Make sure the floor of the desired location is dry and free of dirt or debris.
8. If, over time, the backing gets dirty or dusty, simply wipe RugLock with a damp cloth, let dry, and the tack will return.
9. Machine washable -- delicate setting in cold water.
10. Line-dry ONLY. **DO NOT USE DRYER**.